HOME
DECORATORS
COLLECTION

INV# 23111

SK18164C AVERY 6 CUBE +2 DOOR MOBILE STORAGE 43"Hx37"Wx12"D

ASSEMBLY INSTRUCTIONS

Made In China

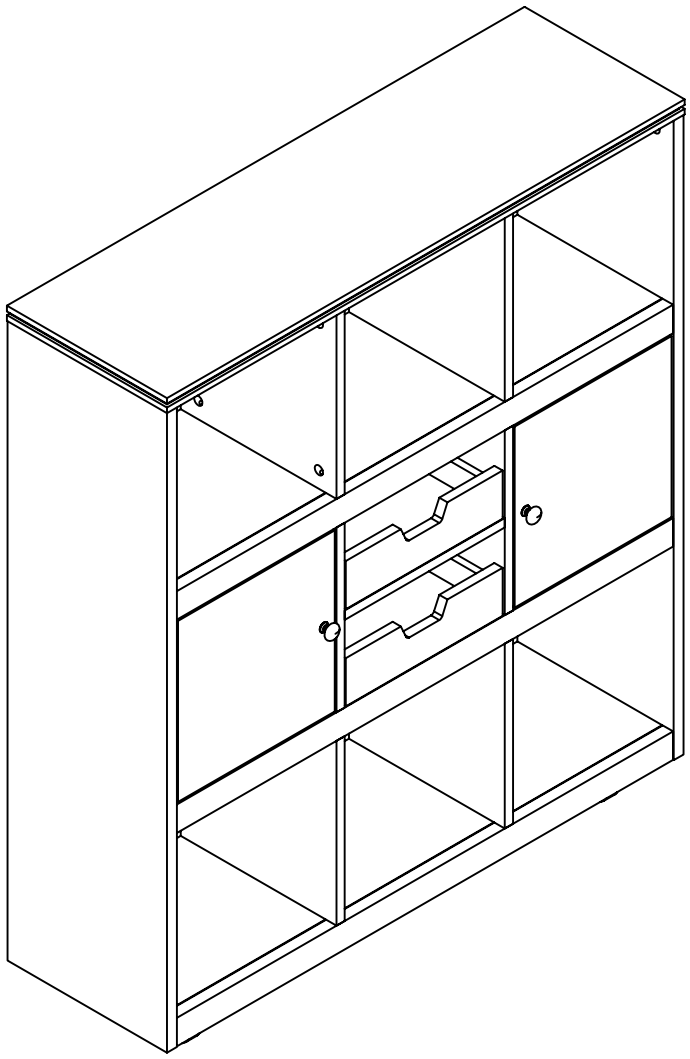

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, please contact our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A 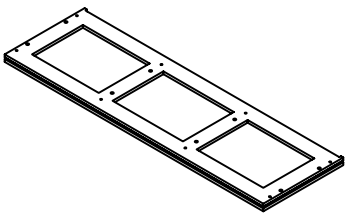 TOP PANEL-1PC	B 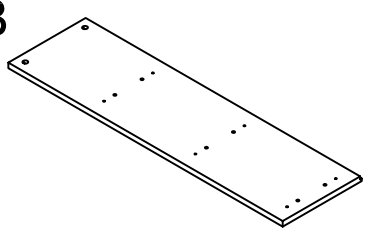 LEFT SIDE PANEL-1PC	C 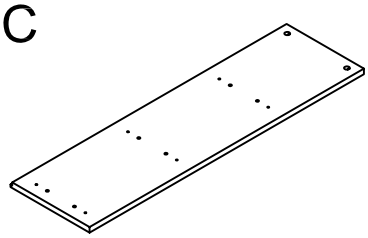 RIGHT SIDE PANEL-1PC
D 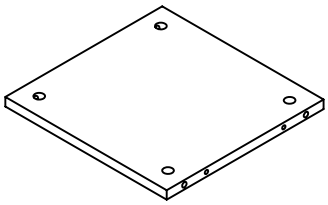 UP MIDDLE PANEL-2PCS	E 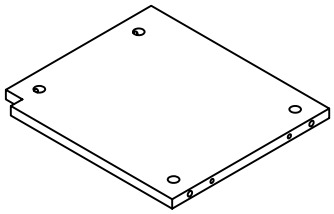 DOWN MIDDLE PANEL-2PCS	F 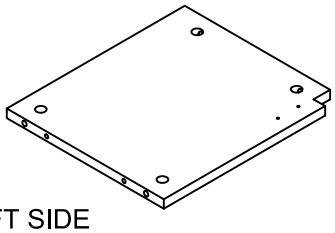 LEFT SIDE MIDDLE PANEL-1PC
G 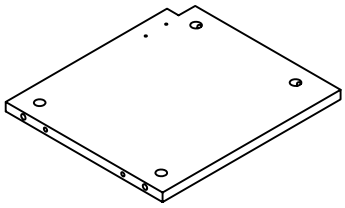 RIGHT SIDE MIDDLE PANEL-1PC	H 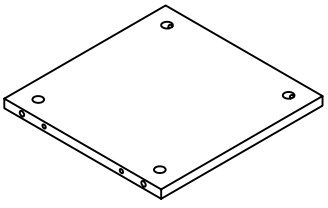 FIXED PANEL-1PC	I 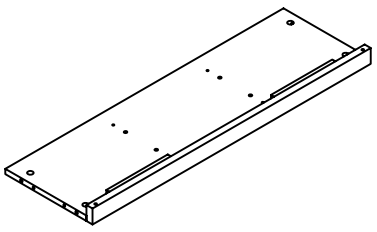 UP FIXED PANEL-1PC
J 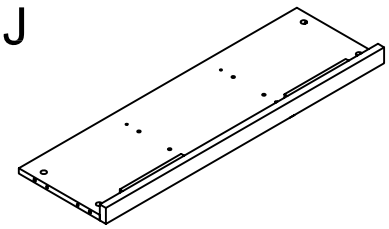 DOWN FIXED PANEL-1PC	K 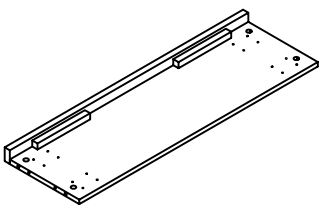 BOTTOM PANEL-1PC	L 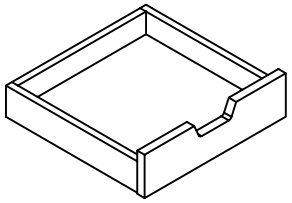 DRAWER-2PCS

M 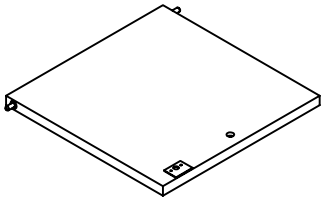 LEFT SIDE DOOR-1PC	N 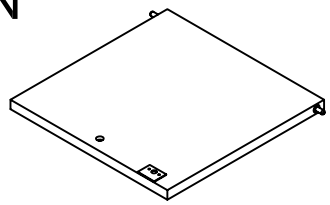 RIGHT SIDE DOOR-1PC	O 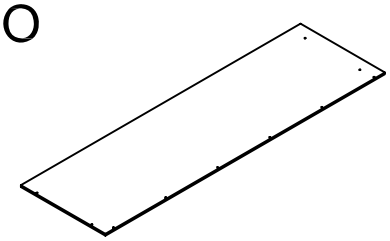 LEFT SIDE BACK PANEL-1PC
P 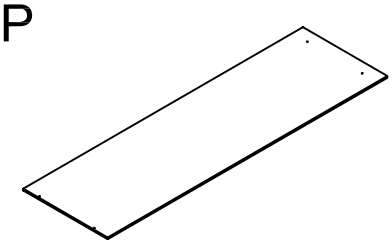 MIDDLE BACK PANEL-1PC	Q 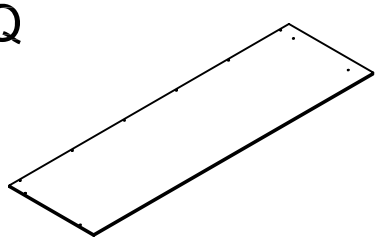 RIGHT SIDE BACK PANEL-1PC	

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE

a WOOD DOWEL-44PCS	b CAM LOCK BOLT-44PCS	c CAM LOCK-44PCS
d LONG PLASTIC COVER-4PCS	e SHORT PLASTIC COVER-24PCS	f 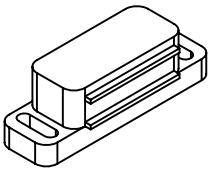 MAGNET-2PCS
g ROUND HEAD SCREW-36PCS	h  METAL PLATE-8PCS	i 5/8" FLAT HEAD SCREW-16PCS
j 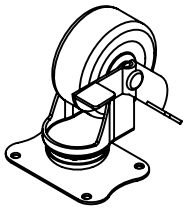 UNIVERSAL WHEEL(1)-2PCS	k UNIVERSAL WHEEL(2)-2PCS	l KNOB BOLT-2PCS
m KNOB-2PCS	1 2 3 4 5 x2 RECTANGLE METAL PLATE; 1/2"L FLAT HEAD SCREW; PLASTIC ANCHOR; PLASTIC BAND; 1-1/2"L FLAT HEAD SCREW ANTI-TIPPING HARDWARE PACKAGE	

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

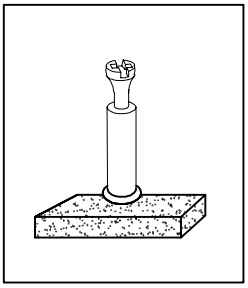

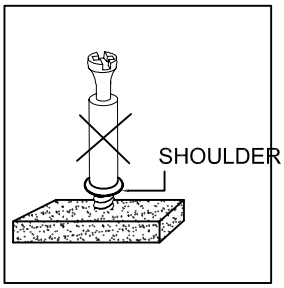

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

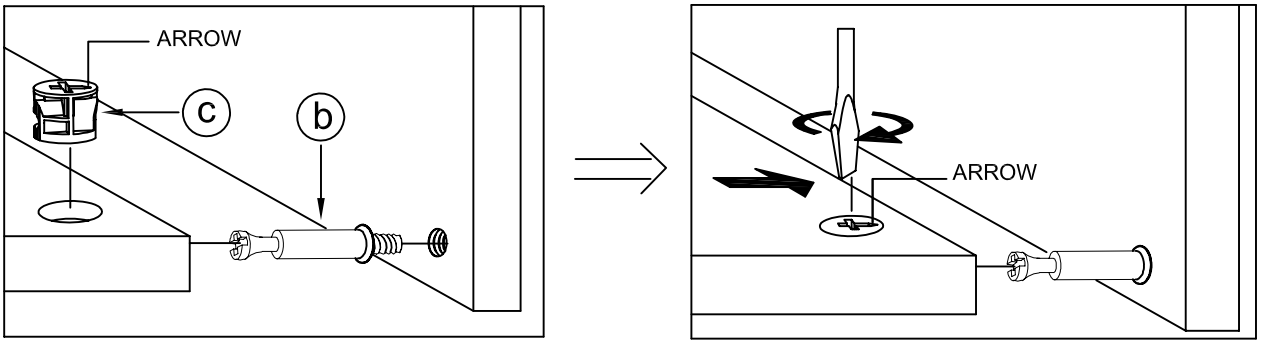

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS.

FIG 1

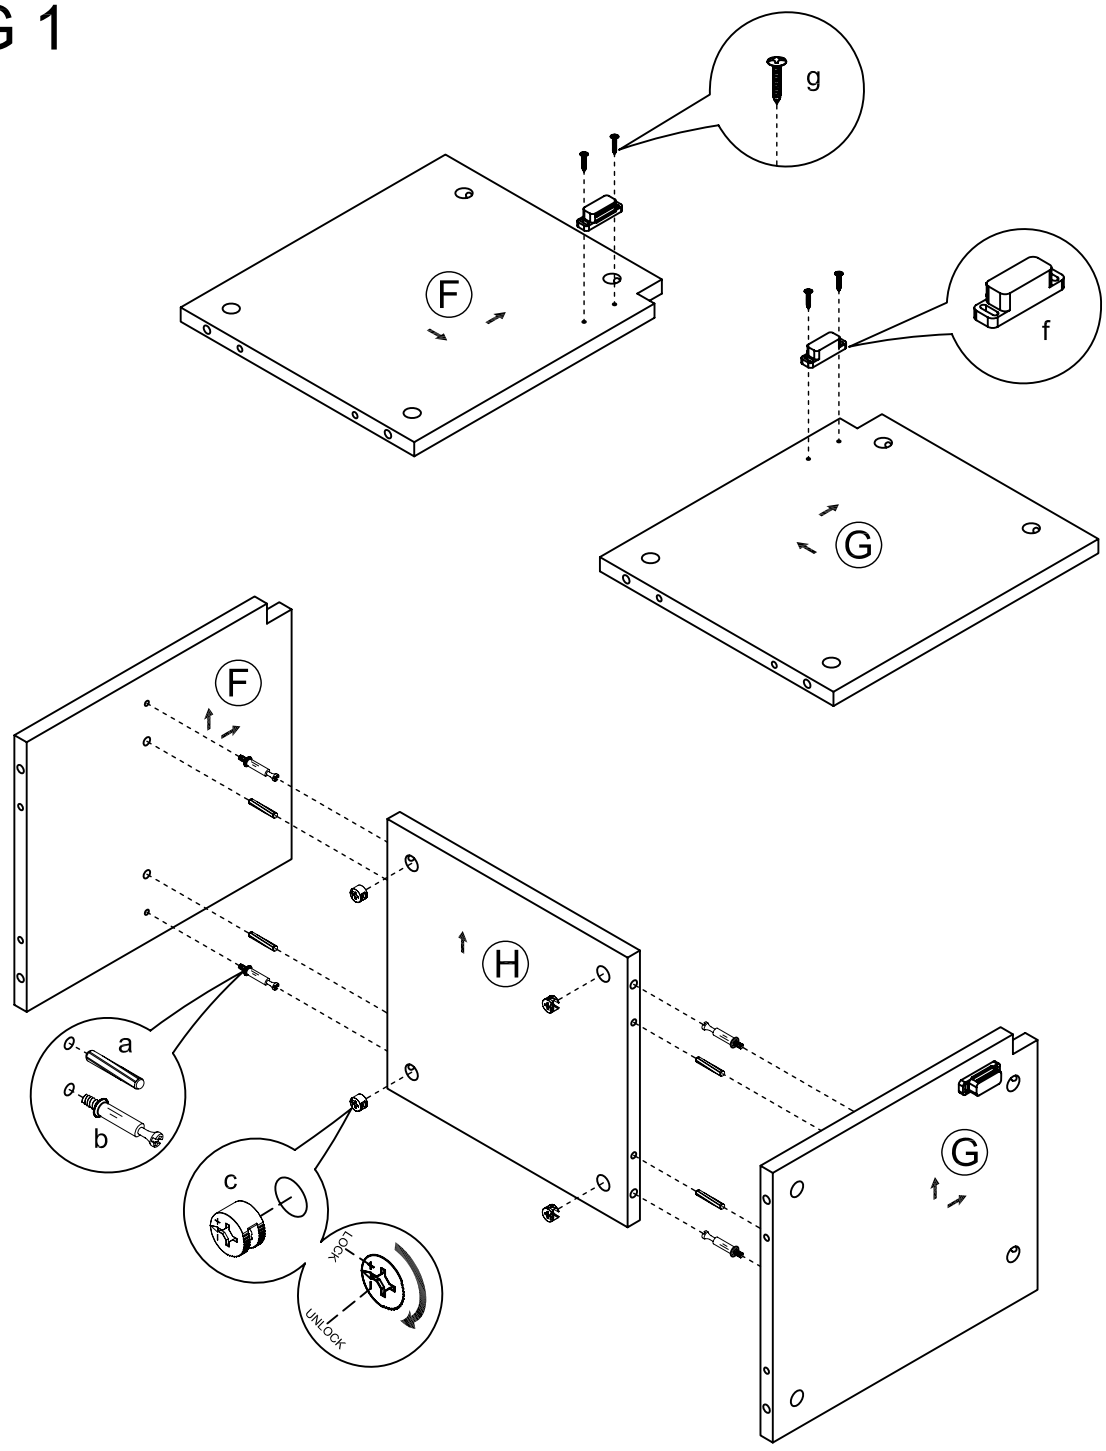

- ATTACH THE MAGNET (f) TO THE LEFT SIDE MIDDLE PANEL (F)
  AND THE RIGHT SIDE MIDDLE PANEL (G) BY USING THE 5/8" ROUND HEAD SCREW (g).
- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b)
  INTO THE LEFT SIDE MIDDLE PANEL (F) AND THE RIGHT SIDE MIDDLE PANEL (G).
- JOIN THE LEFT SIDE MIDDLE PANEL (F) AND THE RIGHT SIDE MIDDLE PANEL (G)
  TO THE FIXED PANEL (H) BY USING THE WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) BY USING THE CAM LOCK (c) FROM PRE-DRILLED HOLES.

FIG 2

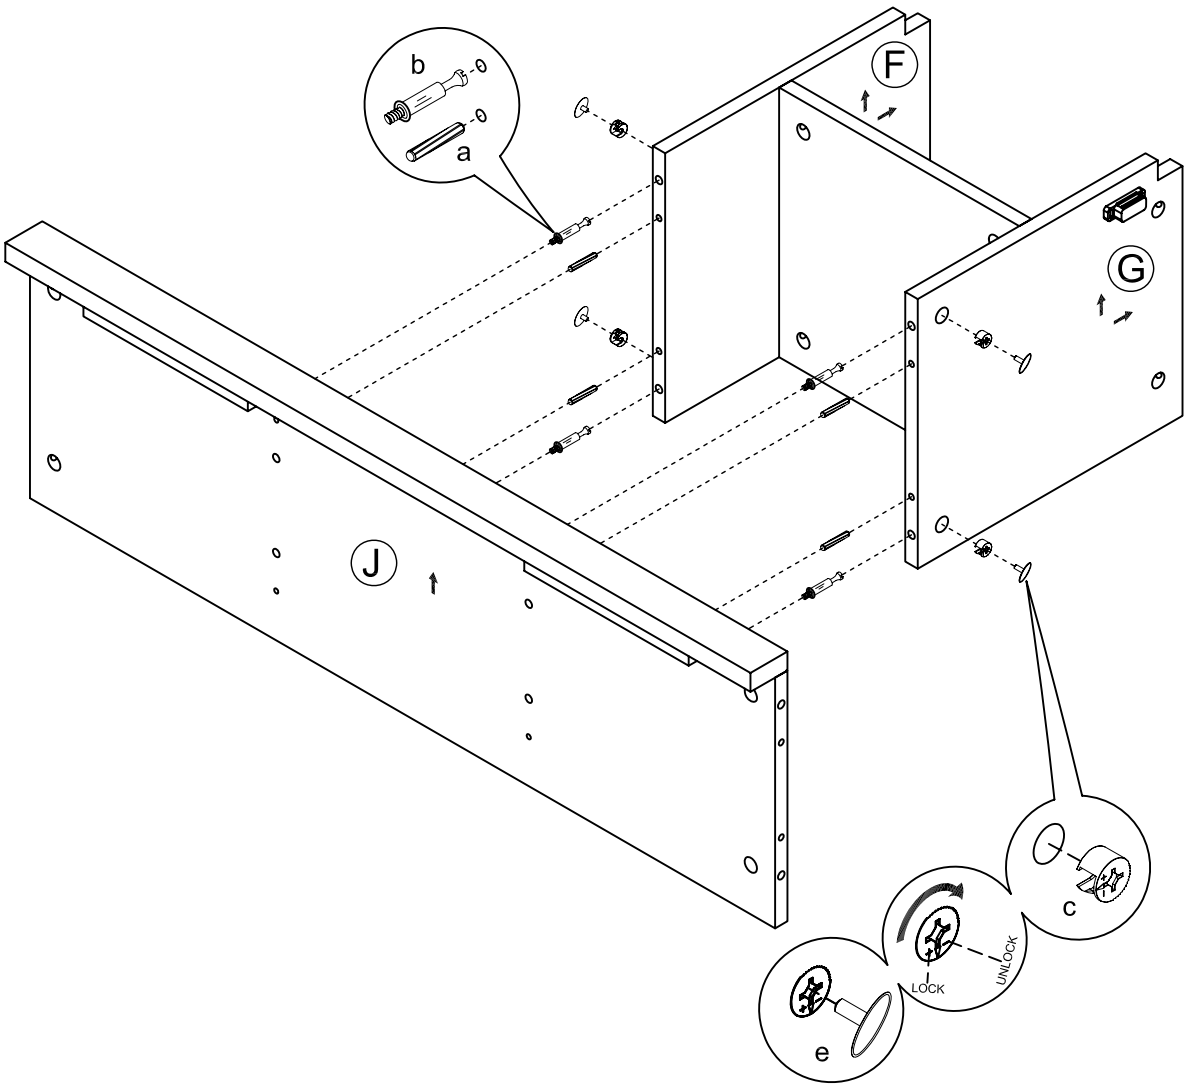

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE DOWN FIXED PANEL (J).
- JOIN THE DOWN FIXED PANEL (J) TO THE LEFT SIDE MIDDLE PANEL (F) AND THE RIGHT SIDE MIDDLE PANEL (G) BY USING THE WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) BY USING THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH SHORT PLASTIC COVER (e).

FIG 3

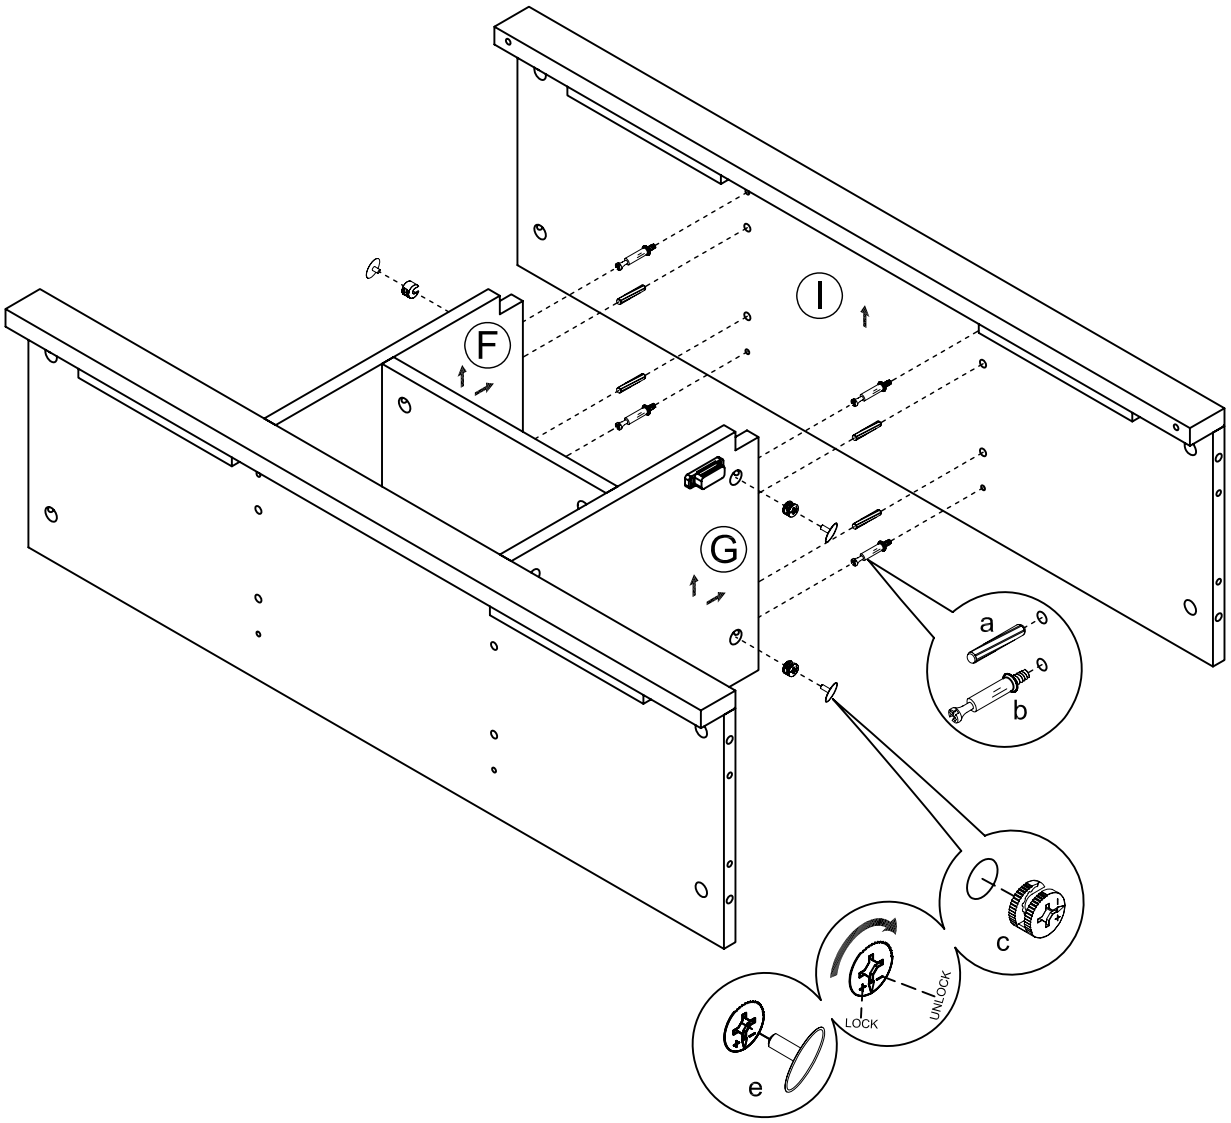

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE UP FIXED PANEL (I).
- JOIN THE UP FIXED PANEL (I) TO THE LEFT SIDE MIDDLE PANEL (F) AND THE RIGHT SIDE MIDDLE PANEL (G) BY USING THE WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) BY USING THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH SHORT PLASTIC COVER (e).

FIG 4

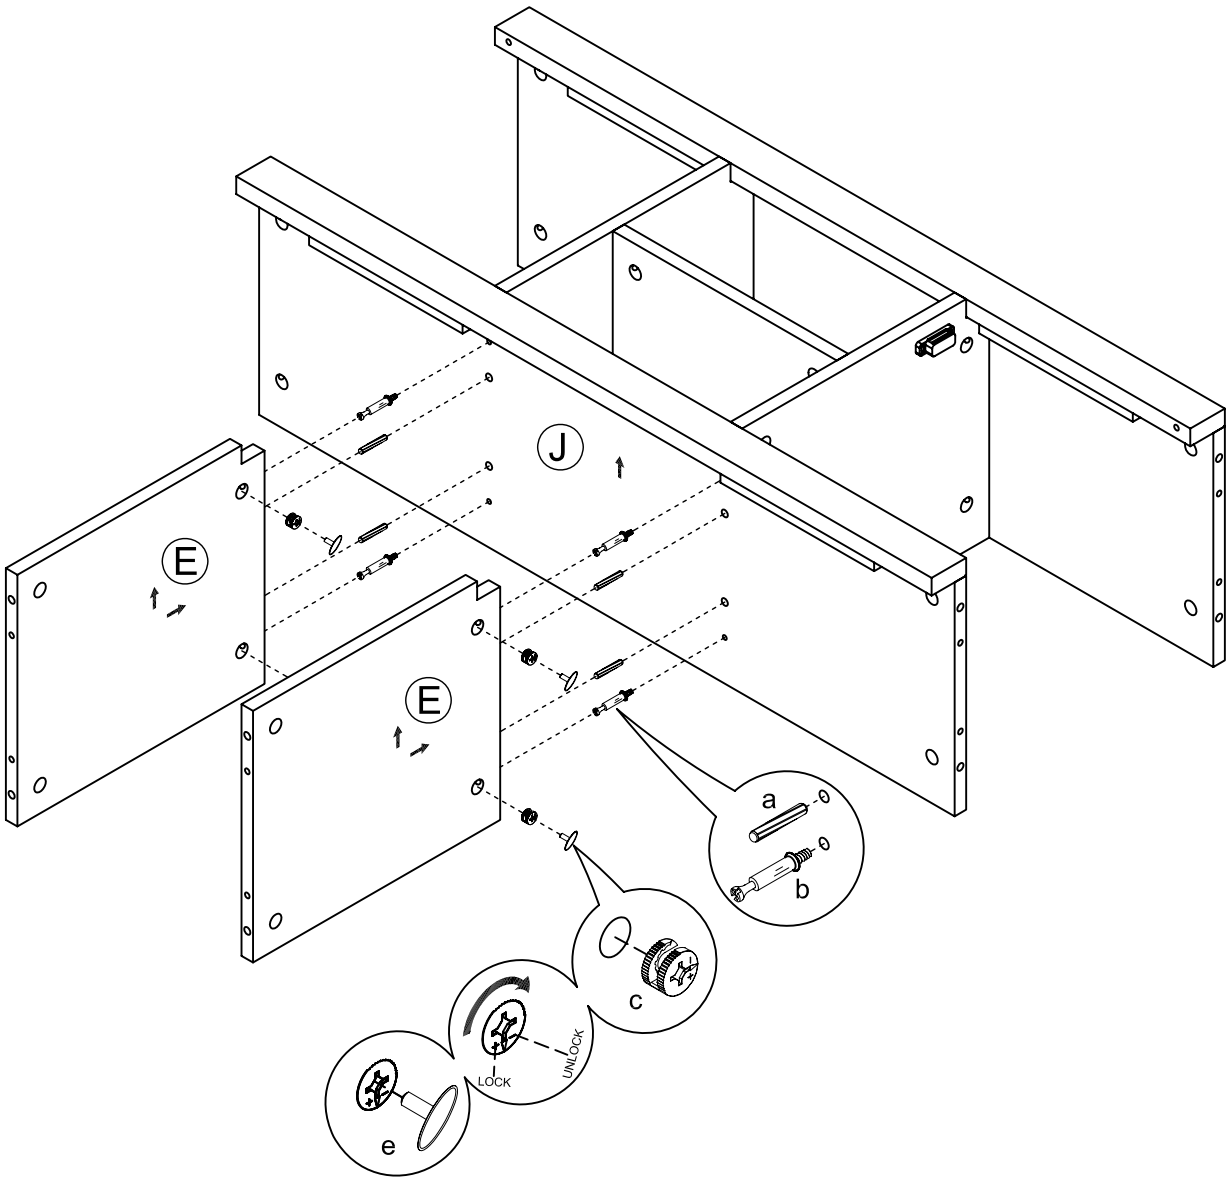

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE DOWN FIXED PANEL (J).
- JOIN THE DOWN MIDDLE PANEL (E) TO THE DOWN FIXED PANEL (J)
  BY USING THE WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) BY USING THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH SHORT PLASTIC COVER (e).

FIG 5

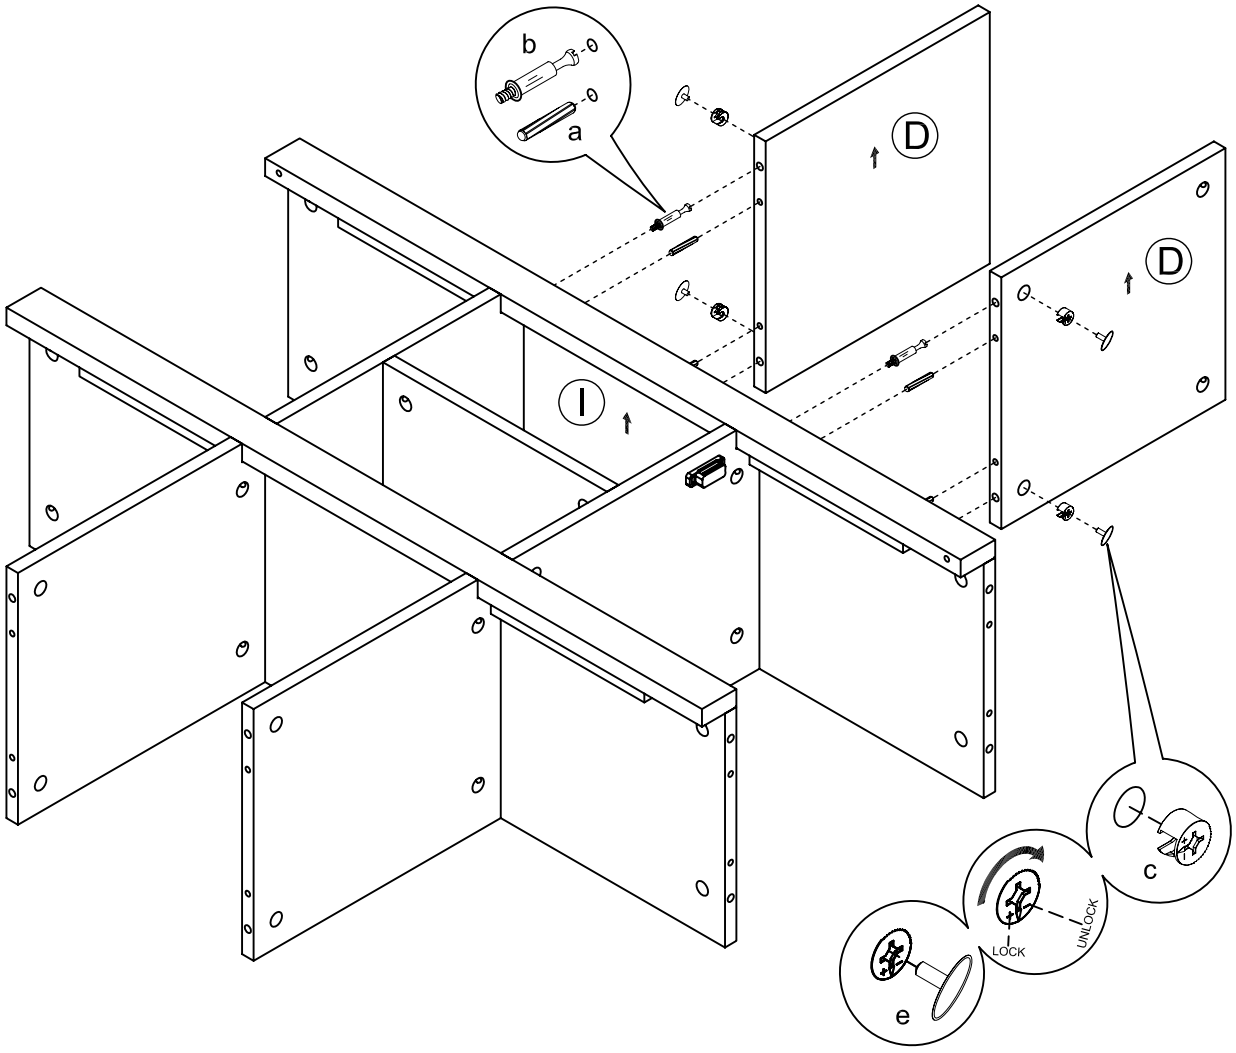

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE UP FIXED PANEL (I).
- JOIN THE UP MIDDLE PANEL (D) TO THE UP FIXED PANEL (I)
  BY USING THE WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) BY USING THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH SHORT PLASTIC COVER (e).

FIG 6

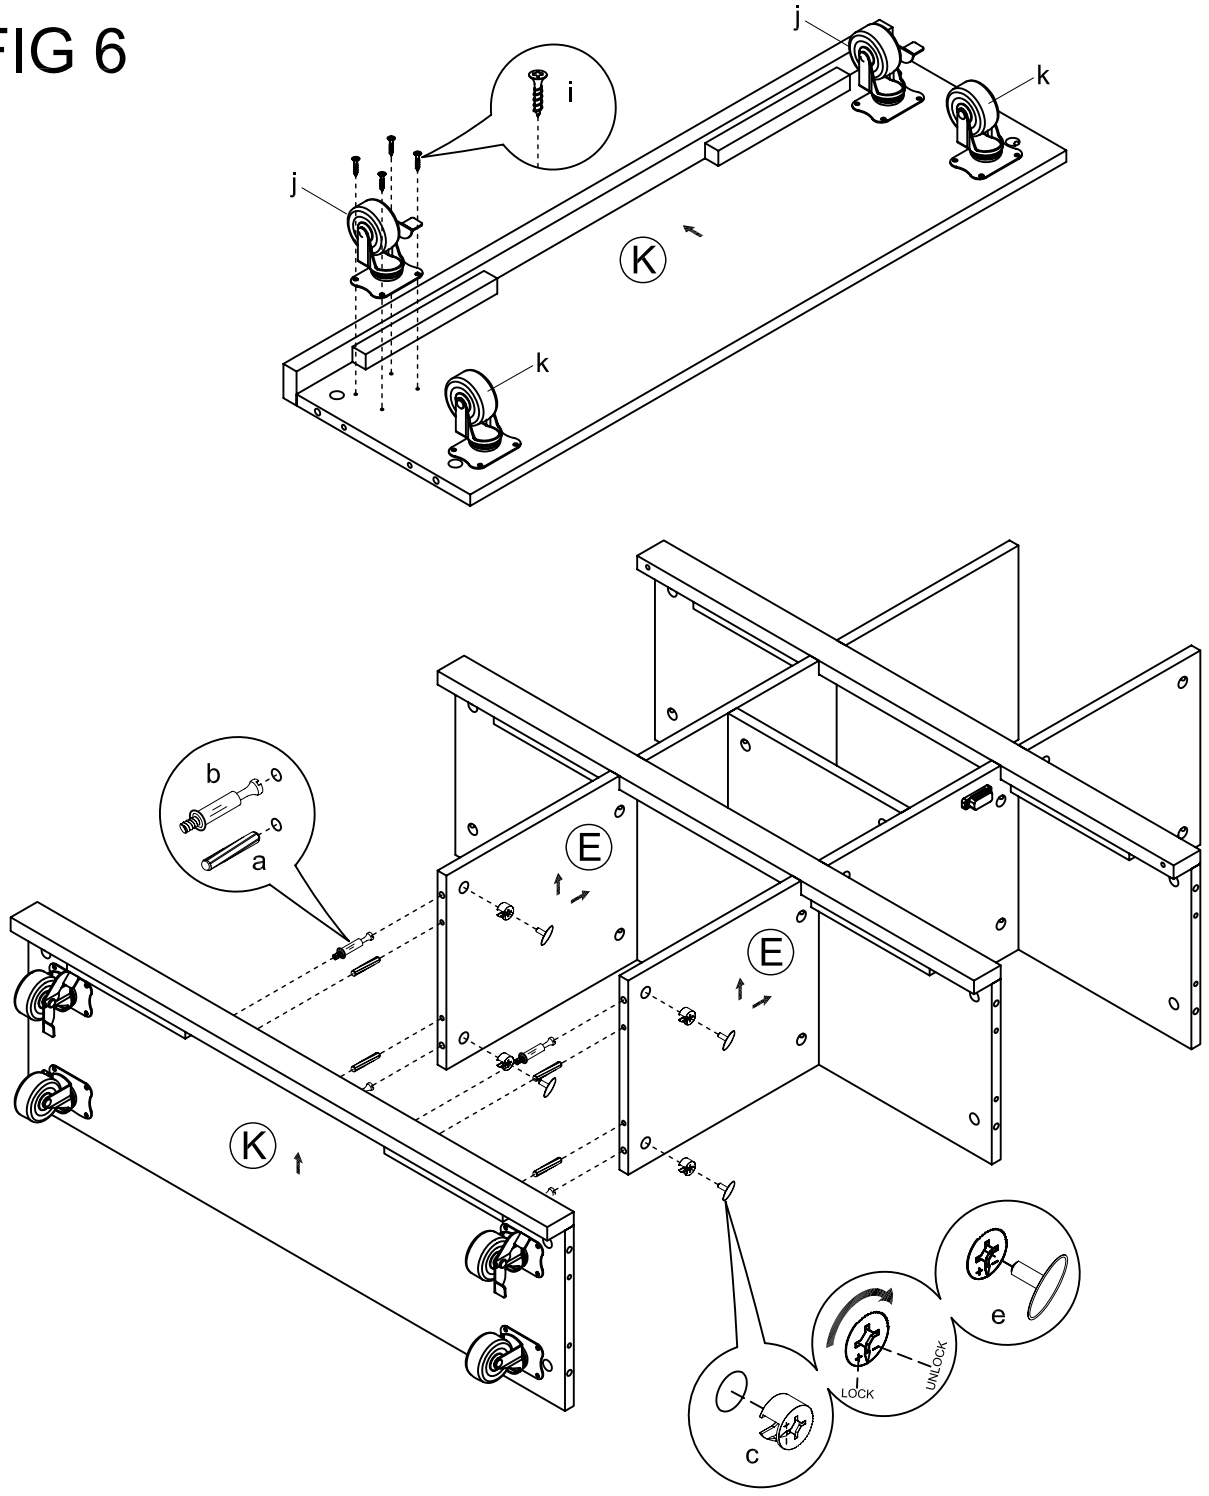

- JOIN THE UNIVERSAL WHEEL (j & k) TO THE BOTTOM PANEL (K)
  BY USING 5/8" FLAT HEAD SCREW (i) FIRST.
- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE BOTTOM PANEL (K).
- JOIN THE BOTTOM PANEL (K) TO THE DOWN MIDDLE PANEL (E)
  BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH SHORT PLASTIC COVER (e).

FIG 7

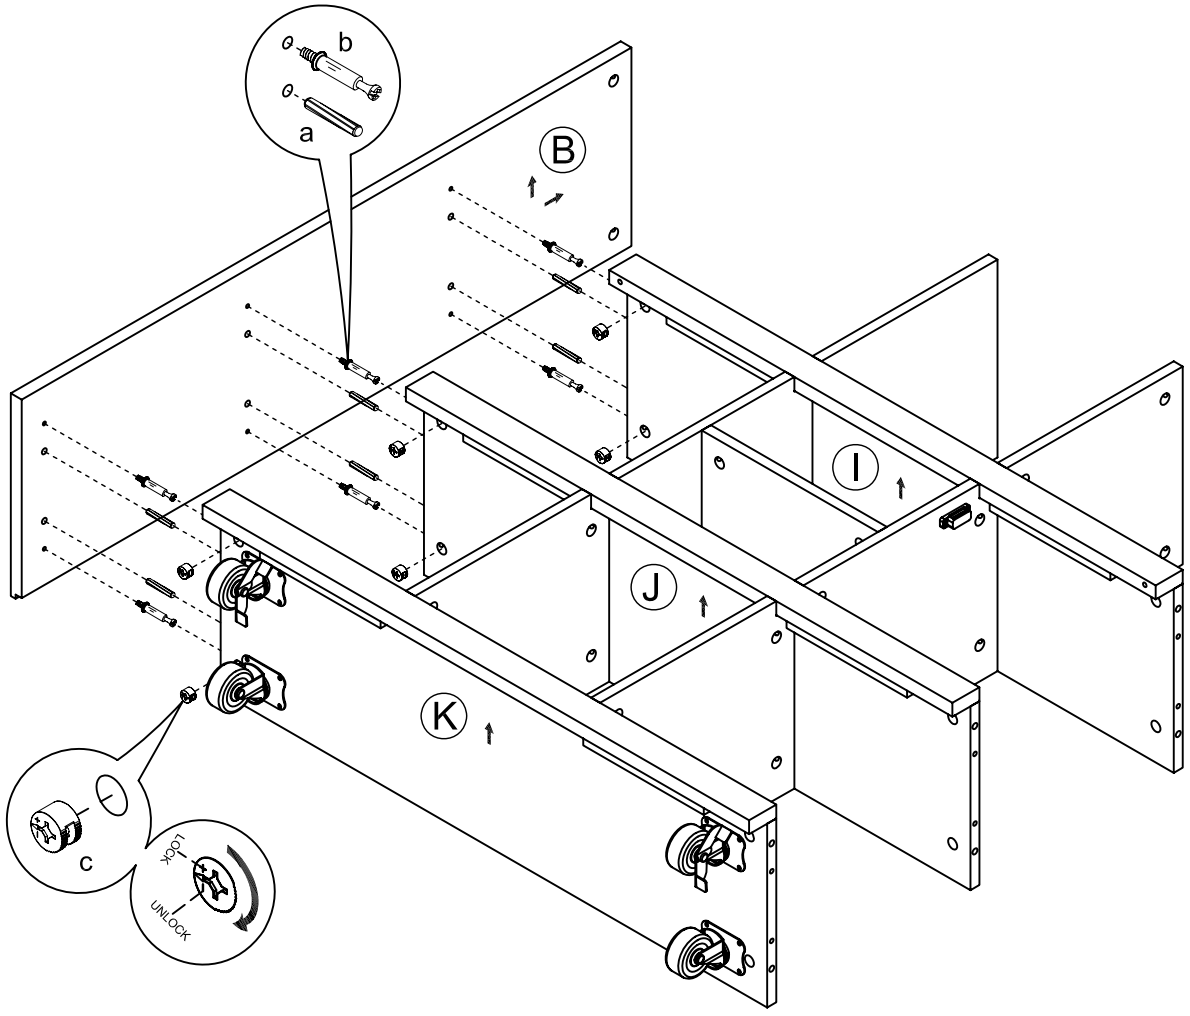

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE LEFT SIDE PANEL (B).
- JOIN THE LEFT SIDE PANEL (B) TO THE ASSEMBLED PART BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.

FIG 8

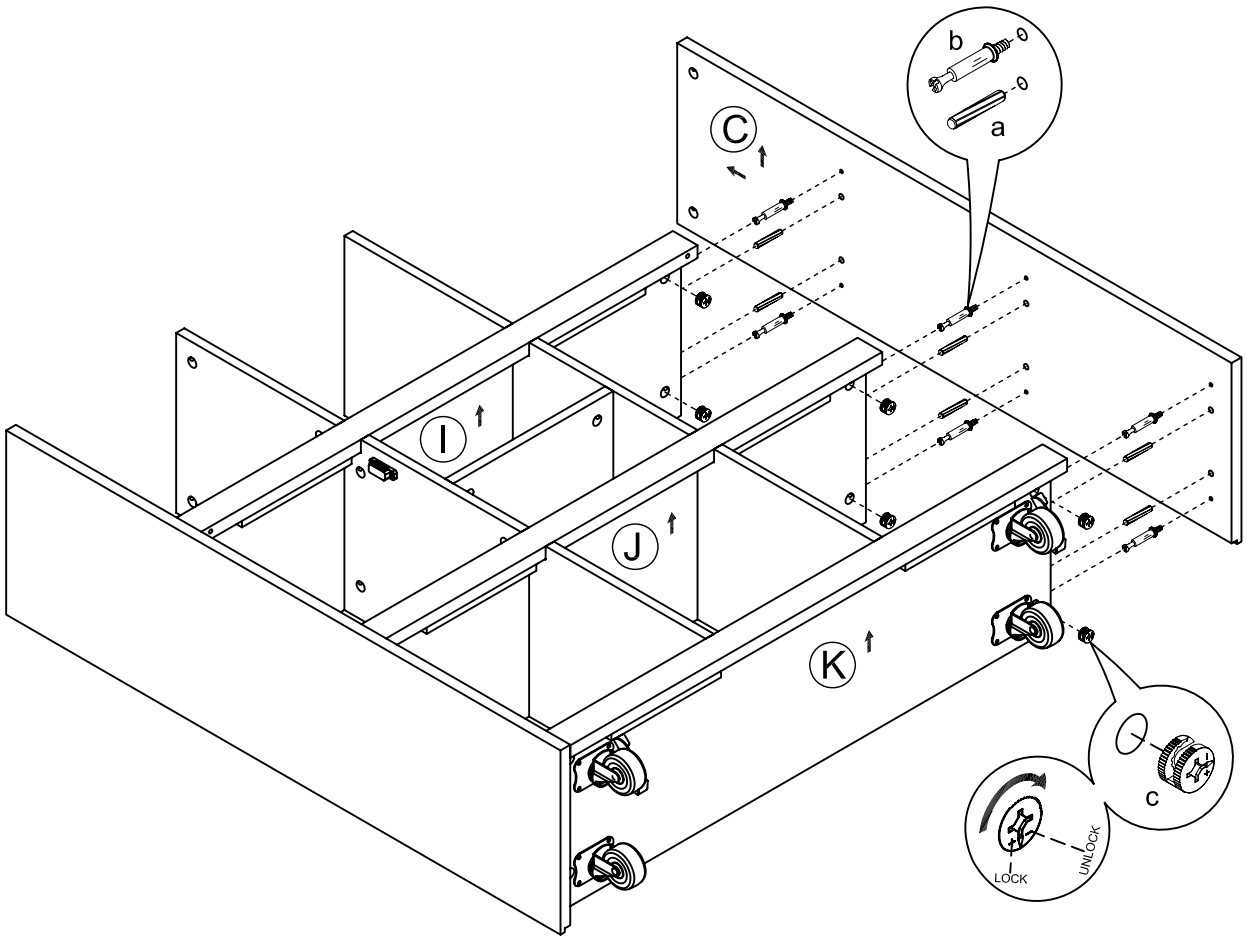

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE RIGHT SIDE PANEL (C).
- JOIN THE RIGHT SIDE PANEL (C) TO THE ASSEMBLED PART BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.

FIG 9

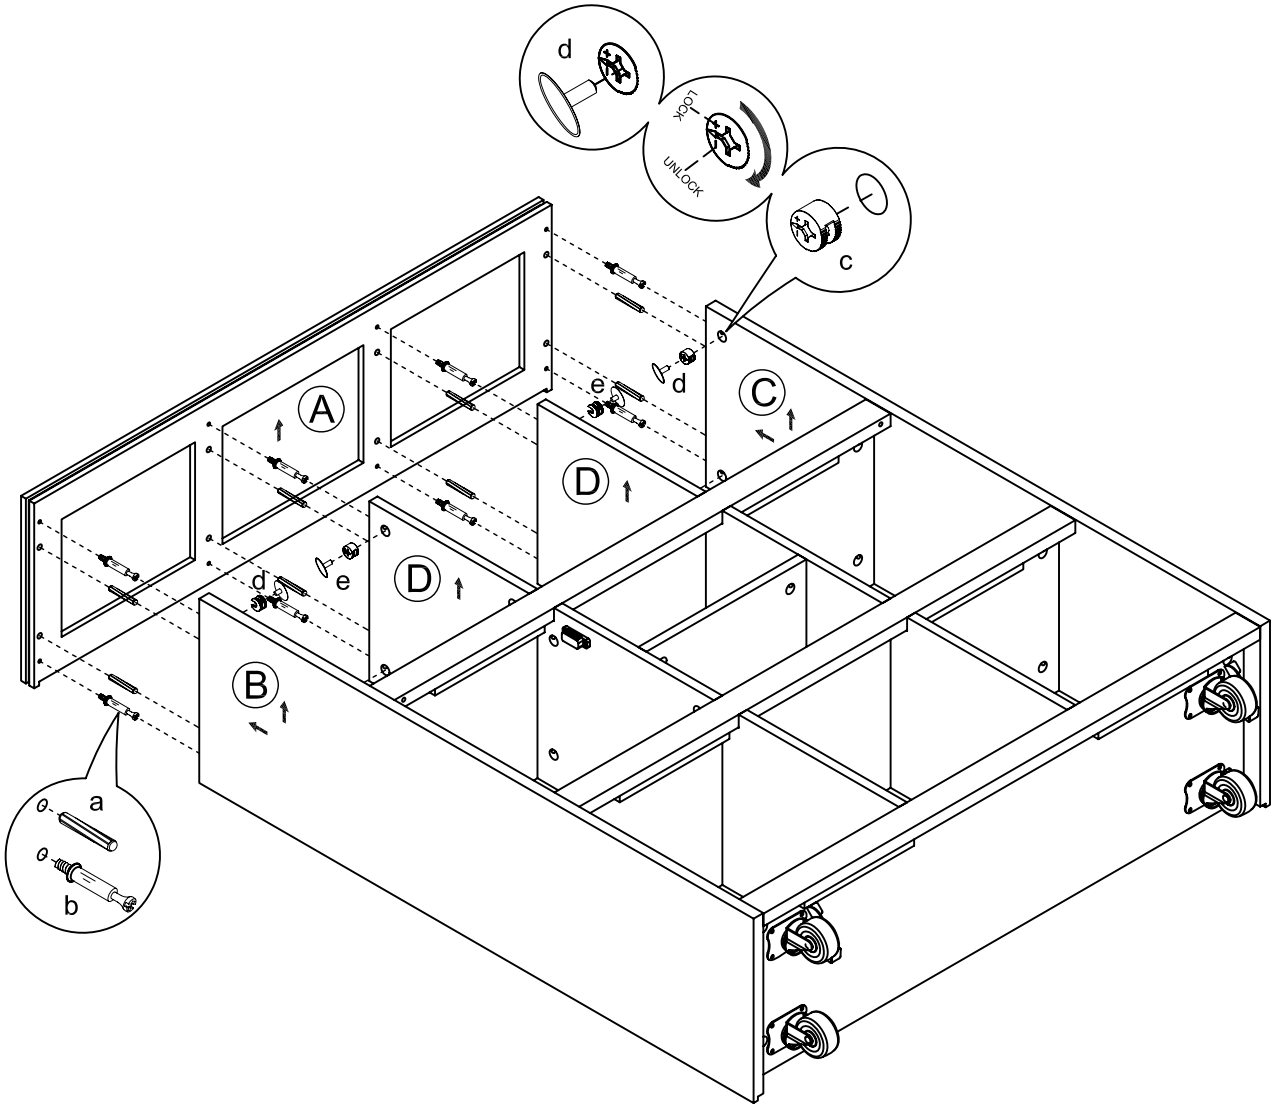

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE TOP PANEL (A).
- JOIN THE TOP PANEL (A) TO THE ASSEMBLED PART BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH SHORT PLASTIC COVER (e) AND THE LONG PLASTIC COVER (d).

FIG 10

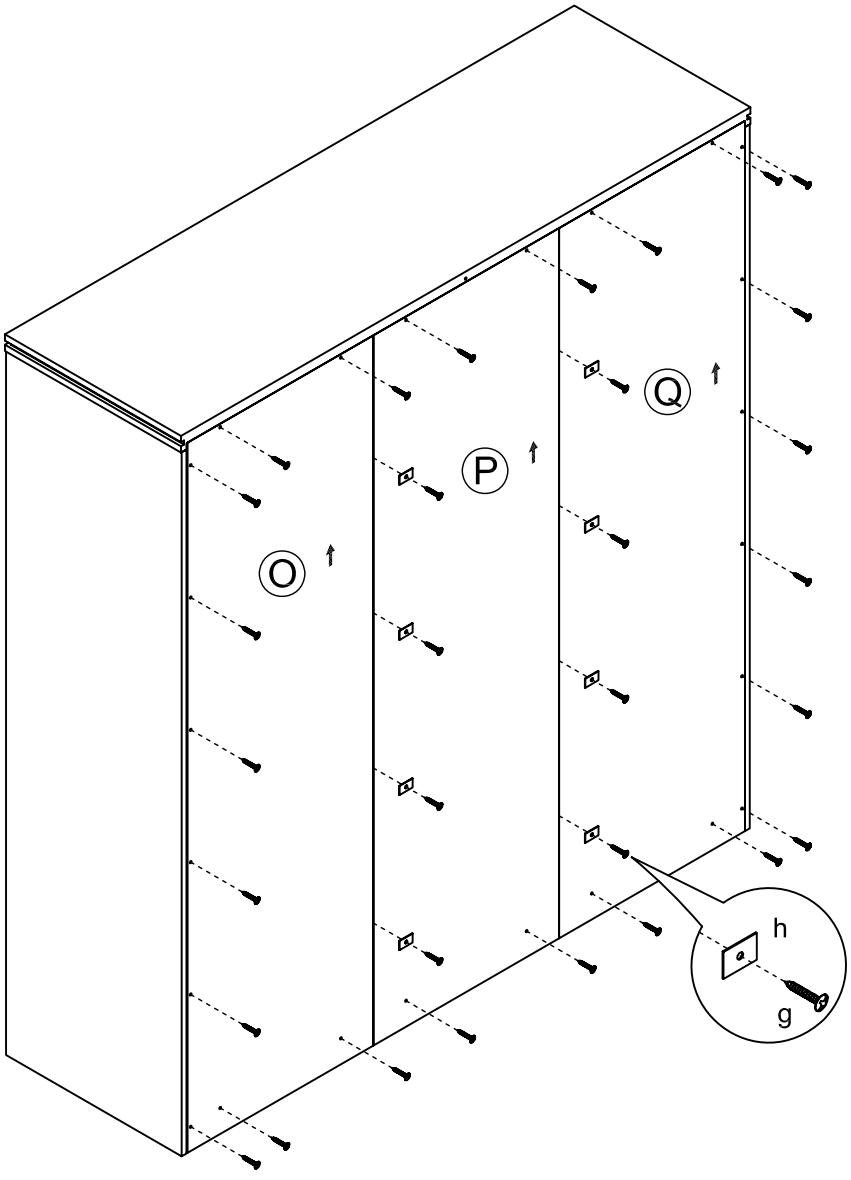

- TIGHTEN THE LEFT SIDE BACK PANEL (O) THE MIDDLE BACK PANEL (P) AND THE RIGHT SIDE BACK PANEL (Q) BY USING THE 5/8" ROUND HEAD SCREW (g) AND THE METAL PLATE (h).

FIG 11

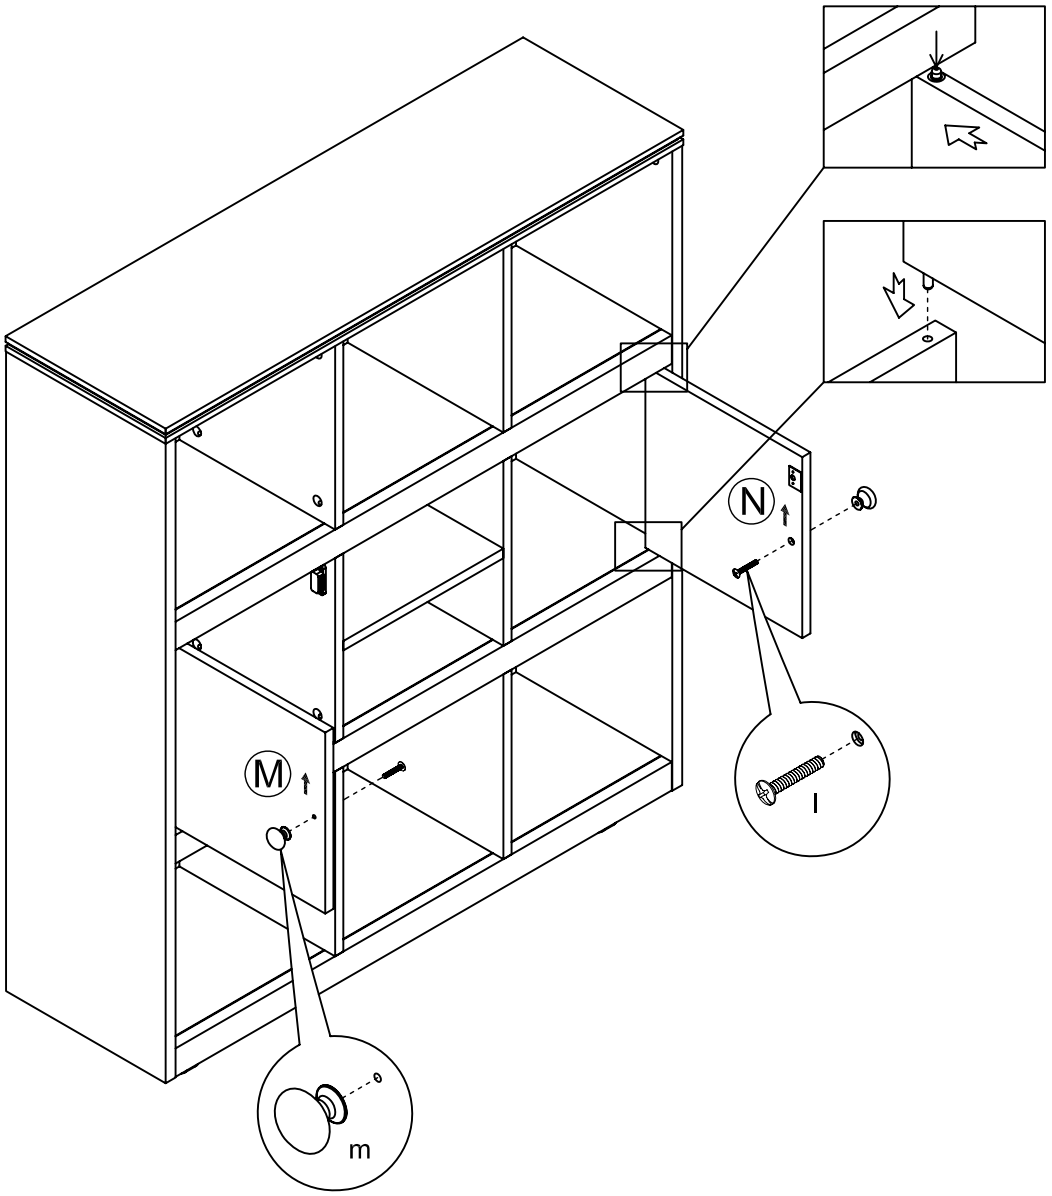

- ATTACH THE LEFT SIDE DOOR (M) AND THE RIGHT SIDE DOOR (N) TO THE ASSEMBLED PART
- TIGHTEN THE KNOB (m) ONTO THE LEFT SIDE DOOR (M) AND THE RIGHT SIDE DOOR (N) BY USING THE KNOB BOLT (l).

FIG 12

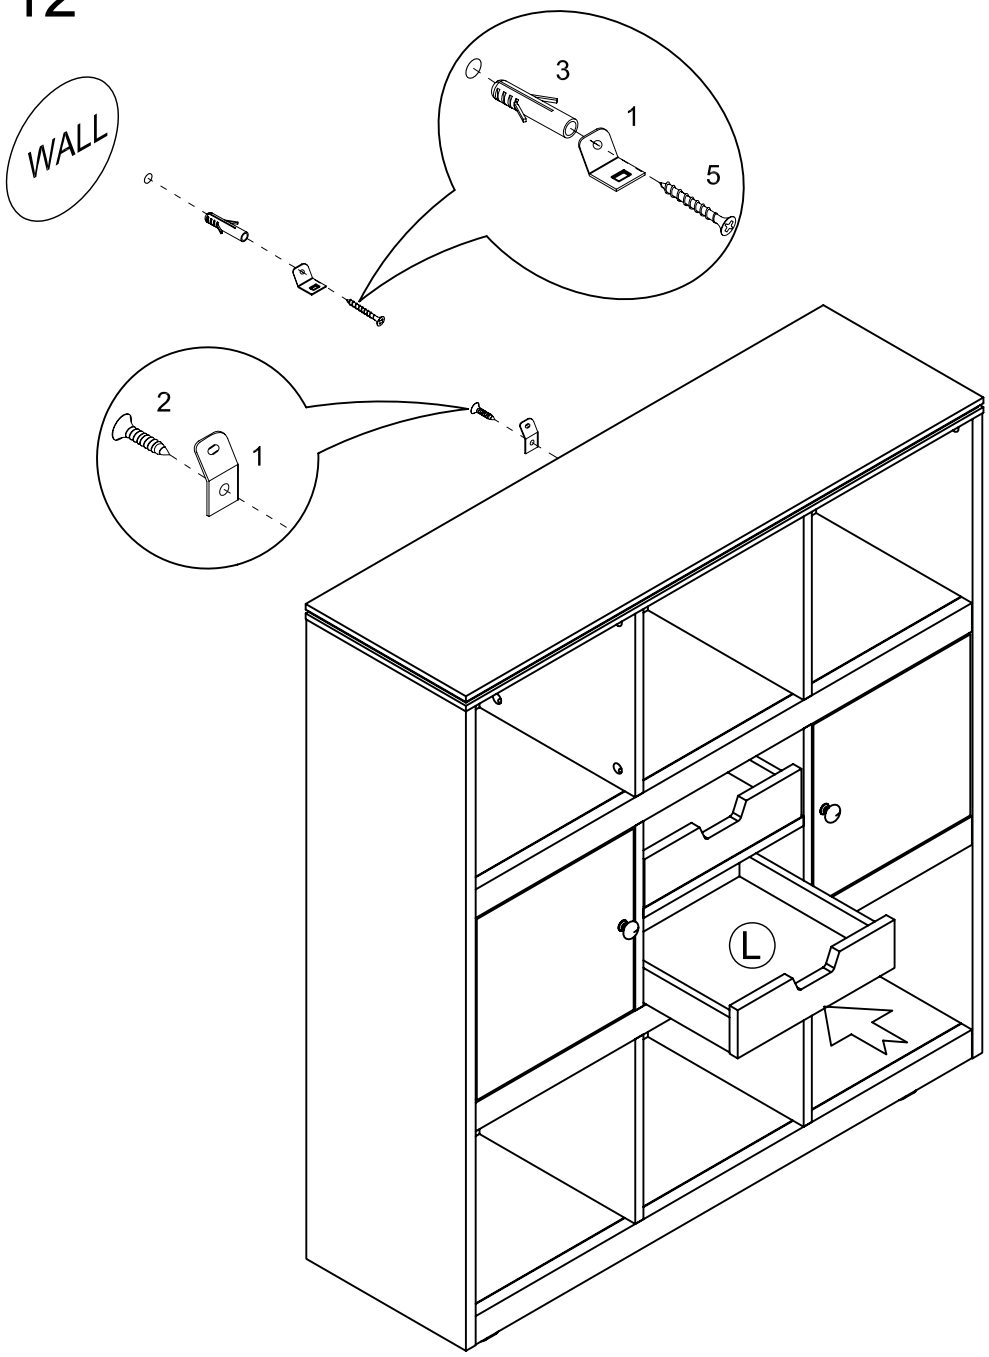

- INSERT DRAWERS INTO THE ASSEMBLED PART.
- TIGHTEN THE RECTANGLE METAL PLATE (1) TO THE REAR OF THE TOP PANEL (A) BY USING 1/2" FLAT HEAD SCREW (2).
- PLACE THE ASSEMBLED MOBILE CART AT THE DESIRED POSITION. MARK THE INSERTION POINTS FOR THE PLASTIC ANCHOR (3).
- USING THE PROPER HARDWARE FOR YOUR WALL TYPE AND DRILL 1/4" HOLES INTO THE WALL.
- TIGHTEN THE RECTANGLE METAL PLATE (1) TO THE PLASTIC ANCHOR (3) BY USING THE 1-1/2" FLAT HEAD SCREW (5).

FIG 13

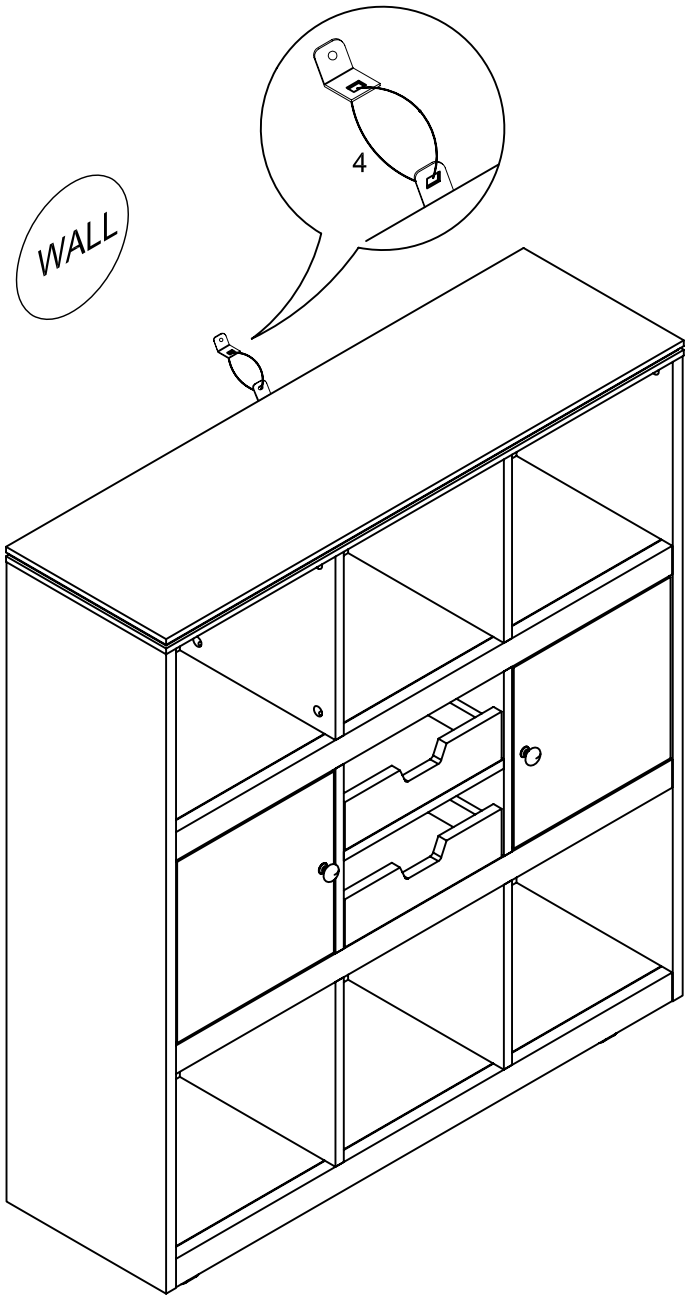

• USING THE PLASTIC BAND (4) CONNECT TWO RECTANGLE METAL PLATES (1).